


M85AMOX0501WG M85MOX11001S
 M85AMOX0551WG M85MOX40501S
 M85AMOX0601WG M85MOX40601S
 M85AMOX0701WG M85MOX40651S
 M85MOX10501S M85MOX40701S
 M85MOX10501S1 M85MOX40801S
 M85MOX10551S M85MOX41001S
 M85MOX10601S M85MOX41101S
 M85MOX10601S1 M85MOX50701WG
 M85MOX10651S M85MOX50801WG
 M85MOX10701S M91AMOX0501WG
 M85MOX10701S1 M91AMOX0701WG
 M85MOX10801S

AM · PM


X-JOY

500x700x30
 550x700x30
 600x700x30
 650x700x30
 700x700x30
 800x700x30
 1000x700x30








500x700x30
 600x700x30
 700x700x30

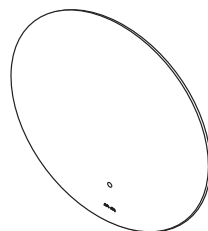

Ø500x30
 Ø600x30
 Ø650x30
 Ø700x30
 Ø800x30
 Ø1000x30
 Ø1100x30

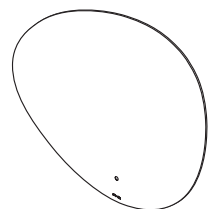

628x672x30
 655x752x30

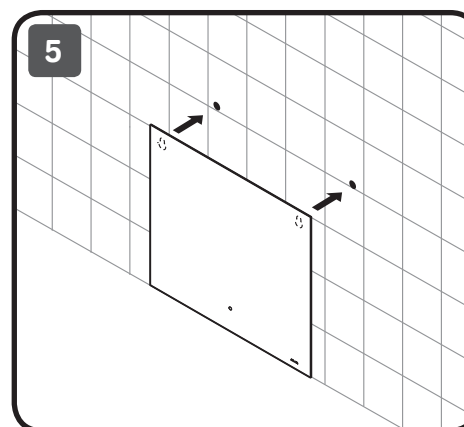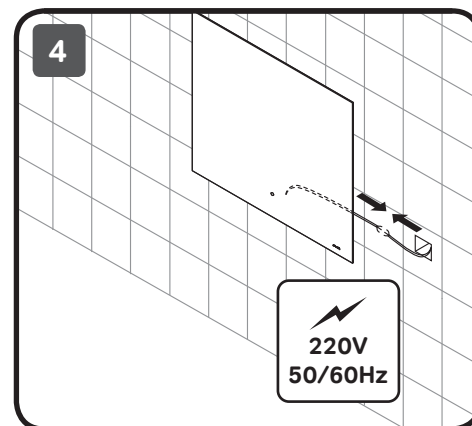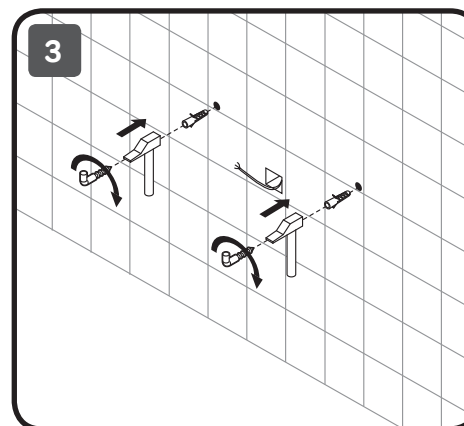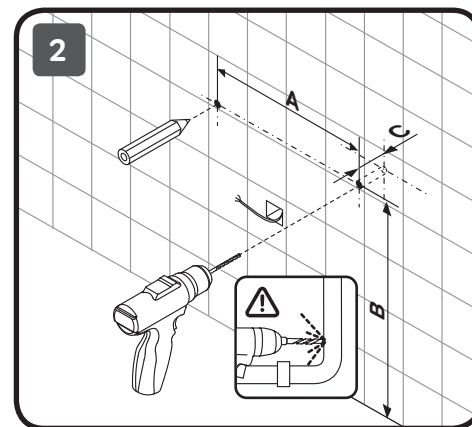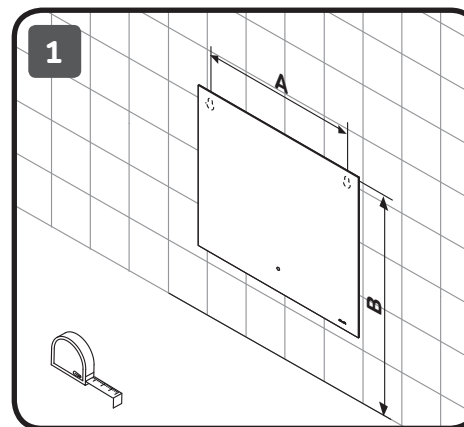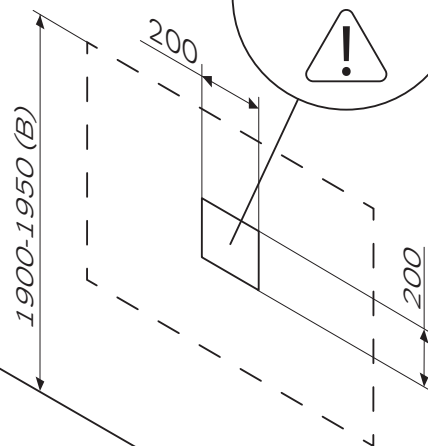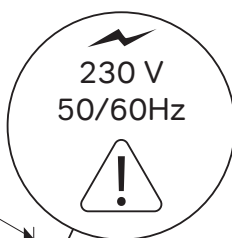

Чтобы включить или выключить подсветку зеркала,
 проведите рукой рядом с инфракрасным датчиком.
 Изменение яркости подсветки:
 Удерживайте ладонь перед ИК-датчиком,
 пока не будет достигнута желаемая яркость.

